



Swedstyle Motion I

Operating manual
Bruksanvisning
Handbuch

CONTENT

1 General information.....4

2 The product.....3

3 Assembly4

4 Operation4

4.1 Adjusting the height5

4.2 Reset procedure.....5

4.3 Container stop5

4.4 Factory reset.....5

1 GENERAL INFORMATION

Assembly personnel must read all documentation before starting assembly. Keep all documentation for as long as the product is in your possession. Ensure that all documentation is provided to subsequent owners. This Manual may change without notice. The most recent version is available on our website.

⚠ CAUTION. Risk of minor or moderate injury through uncontrolled movement

The table may not always stop exactly at the expected position. Failure to anticipate the table's movements may lead to minor or moderate injury through crushing. Wait until the system has completely stopped before attempting to use the table

⚠ CAUTION. Risk of minor or moderate injury through unsecured objects

While the table moves up and down, unsecured objects may fall off the table and onto body parts. This may lead to minor or moderate injury through crushing. Ensure loose objects are kept away from the edge of the table. Do not leave unnecessary objects on the table during movement.



⚠ CAUTION. Risk of minor or moderate injury through crushing

Failure to release Handset Buttons correctly may result in the table failing to stop properly. This may lead to minor or moderate injury through crushing. Do not slide your finger to a different Handset button while another button is pressed. Disconnect the system immediately if any Handset Button becomes stuck

INFO. The technology within the Handset may be interrupted by external interferences during operation. This may lead to certain user inputs (i.e. button presses) not being recognized.

2 THE PRODUCT

Features

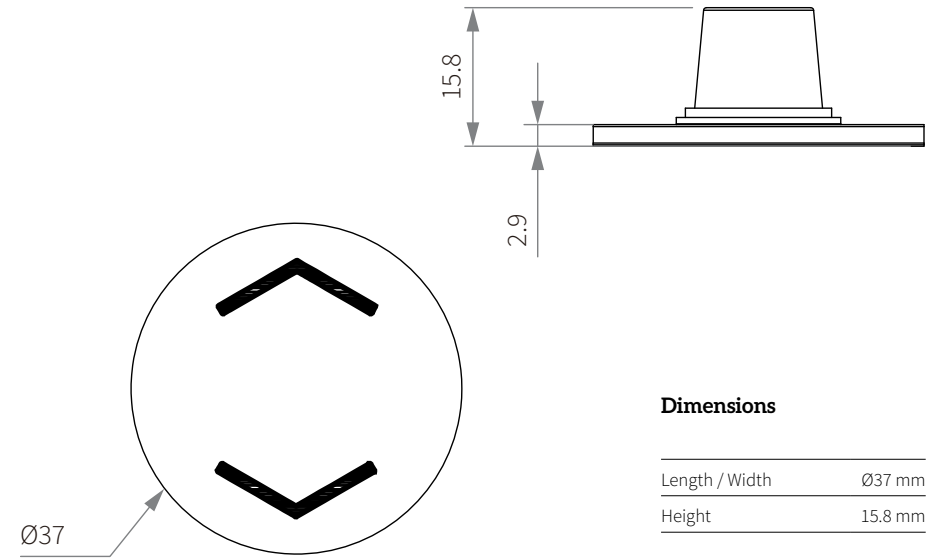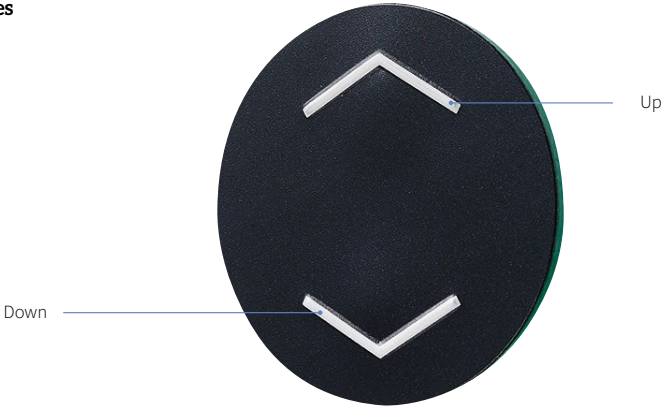

Dimensions

Length / Width	Ø37 mm
Height	15.8 mm

4 OPERATION

CAUTION. Risk of minor or moderate injury through crushing

Your fingers may be crushed when you attempt to change the height of the table. Keep fingers away from moving parts. Ensure that no persons or objects are in the table's range of motion. The Table Top will move up or down until the UP or DOWN button is released, or if a pre-defined stopping point has been reached.

4.1 Adjusting the height

To move the table top UP:

Press and hold  until the desired height has been reached

To move the table top DOWN:

Press and hold  until the desired height has been reached

4.2 Reset procedure

1. Lower the frame by pressing the down button on the hand control. Keep pressing. The table will go to its lowest position and then move up about 5 mm. It has now reached its lower position.
2. Release the button. The reset is now complete.

4.4 Factory reset

A function if you want to reset all settings as a new box with factory set. NOTE! it does not reset any changed settings regarding Inch - cm.

1. Press the up + down buttons simultaneously for at least 30 sec. The table will then move to the absolute lower position and after 5 seconds a beep will sound.
2. Hold for another 25 seconds until a long beep is heard.

4.3 Container stop

A function used to set a lowest or highest position to table. Used to protect eg a drawer underneath the table top.

Set a highest position:

1. Move the table to the desired heighest height that you want to save.
2. Press the up + down button simultaneously, within 2-3 seconds release the down button.
3. Press the "down" button slowly 3 times, you will hear a beep.
4. A heighest position has now been saved.

Set a lowest position:

1. Move the table to the desired lowest height that you want to save.
2. Press the up + down button simultaneously, within 2-3 seconds release the up button.
3. Press the "up" button slowly 3 times, you will hear a beep.
4. A lowest position has now been saved.

Deactivate the container stop:

1. Move the table to the end position that you want to deactivate.
2. Repeat the same steps 2-4 as when activating the container stop. (see above)

Smart office solutions

Swedstyle AB.

Box 171, SE-567 24 Vaggeryd, Sweden

info@swedstyle.se

+46 393-363 60

www.swedstyle.com

