

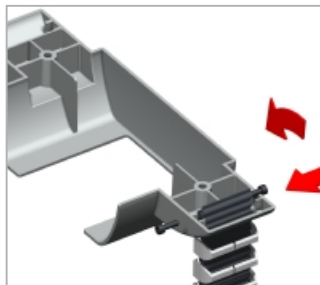


Benutzer Information


Canvaro Montageanleitung Kabelkette

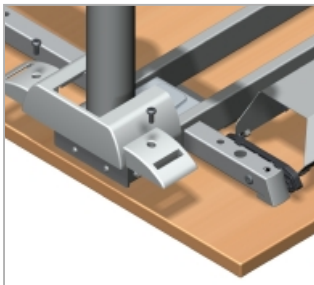

Kunststoffblende demontieren; die Kabelkette durch den Schlitz einführen und durch Montage der Schrauben sichern.

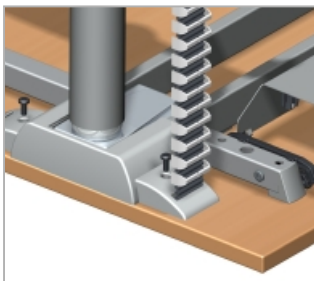

Kunststoffblende mit Kabelkette montieren. Kabelkette und Klammer mit je 4 Schrauben oben

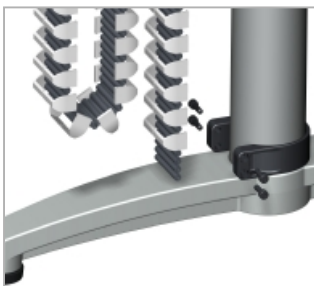

und unten am Standrohr montieren und lose ausrichten. Kabelkette spannen und Schrauben fest ziehen.





ASSMANN BÜROMÖBEL
GMBH & CO. KG
Heinrich-Assmann-Straße 11
D-49324 Melle

Fon +49 (0) 5422 706-0
Fax +49 (0) 5422 706-299


E-Mail: assmann@assmann.de
Internet: www.assmann.de

Instruction Sheet


Canvaro Assembly Instruction cable chain

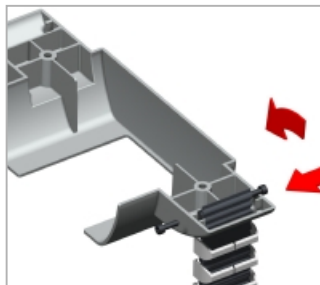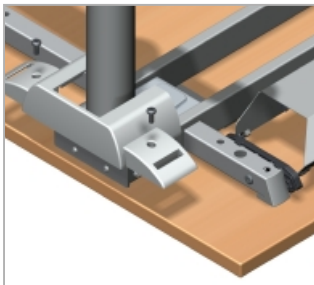

Detach the plastic panel; insert the cable chain through the slot and secure it by mounting the screws.

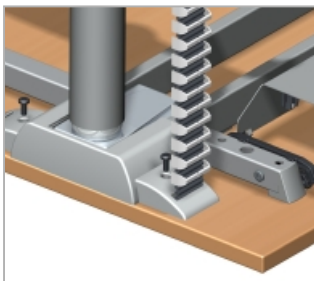

Mount the plastic panel with the cable chain. Mount the cable chain and clamp with 4 screws

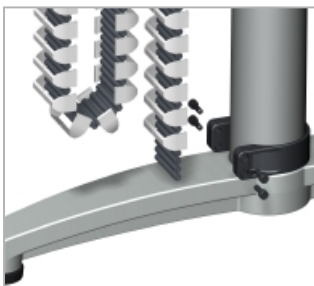

respectively at the top and bottom of the upright tube and align them loosely. Tighten the cable chain and the screws.



ASSMANN BÜROMÖBEL
GMBH & CO. KG
Heinrich-Assmann-Straße 11
D-49324 Melle

Fon +49 (0) 5422 706-0
Fax +49 (0) 5422 706-299

E-Mail: assmann@assmann.de
Internet: www.assmann.de